

How Much Air Should I Put in My Tires?

It depends on the vehicle application, the size of the tires, how much weight is put on the tires, and a host of other engineering-based calculations that the vehicle and tire manufacturers work together to set for each vehicle. These air pressure specifications are in your Owner's Manual, and on a *Vehicle Information Placard*, often positioned in the glove box or on the driver's side doorjamb of your vehicle.